

PD425B

Fig. 1—Windshield Wiper Blade Replacement

be pulled out to the holding position and remove the arm from the pivot using a rocking motion.


Installation

For proper installation of wiper arm refer to "Windshield Wiper Arm Adjustment."


CAUTION: The use of a screwdriver or other prying tool to remove an arm may distort it in a manner that will allow it to come off the pivot shaft in the future, regardless of how carefully it is installed.

MOTOR REMOVAL (H-N-R-W-X-S-P-D-C MODELS)

- (1) Disconnect battery ground cable.
- (2) Remove wiper arm and blade assemblies.
- (3) Remove cowl screen.
- (4) Hold the motor crank with a wrench while removing the crank arm nut (to prevent overloading the gears) to remove the crank arm from the motor. Disconnect wiring to motor.
- (5) Remove the three wiper motor mounting nuts and remove motor.

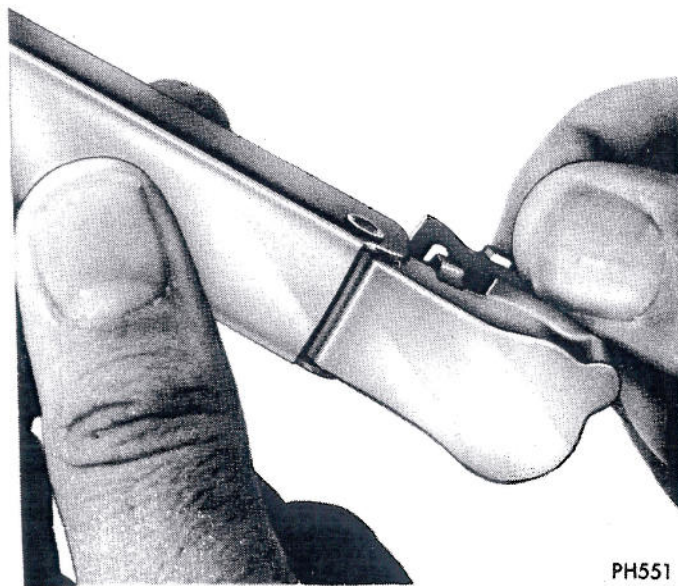

PH551

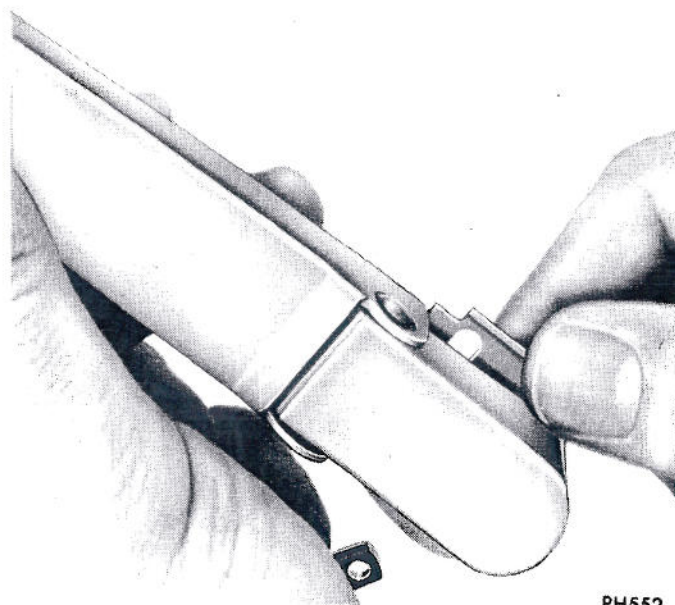Fig. 2—Removing Wiper Arm H and N

PH552

Fig. 3—Removing Wiper Arm (R-W-X-S-P-D-C Models)