

PN254


Fig. 18—Washer Aiming H and N**Removal**

- (1) If so equipped disconnect electrical leads from washer fluid sensor.
- (2) Remove screws mounting reservoir to wheel housing or bracket.
- (3) While holding reservoir, disconnect electrical leads from pump.


(4) Carefully remove hose from pump and empty fluid from reservoir.

(5) On all models except H-N carefully pry apart lid from reservoir with a large blade screwdriver.

(6) Remove pump mounting nut and plastic washer from reservoir. On H-N models access to nut and washer can be obtained through filler cap opening.

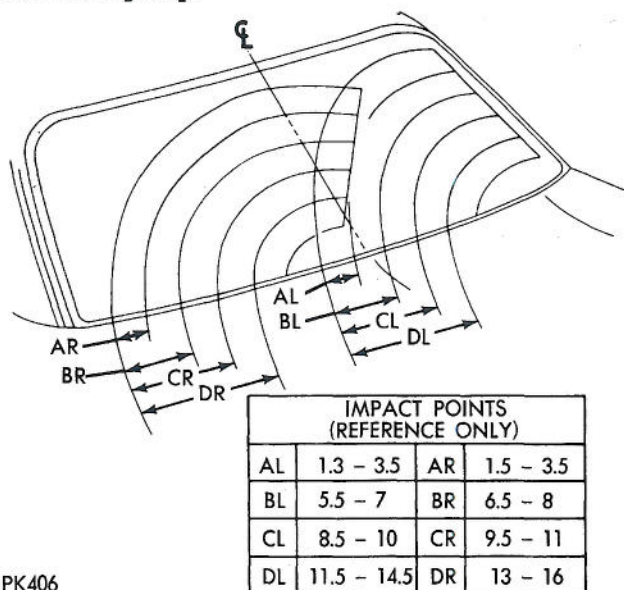

PK406

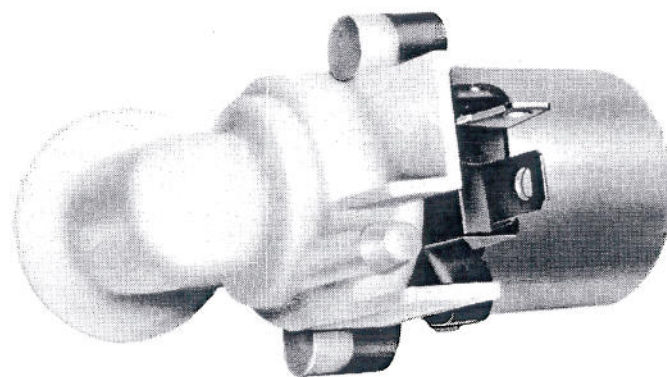Fig. 19—Windshield Reference Points R, W, S, X, P, D, and C**Fig. 20—Washer Pump All Models**

PH550