

(7) Remove pump from bottom of reservoir and throw away rubber grommet.

Installation

(1) Install new rubber grommet into place in bottom of reservoir.

(2) Position pump into place in reservoir install plastic washer then mounting nut, and tighten to 20 inch pounds torque. **DO NOT OVERTIGHTEN.**

(3) Snap lid into place on reservoir body making sure proper seal is obtained.

(4) Connect electrical leads and hose to pump, position reservoir into place on wheel housing, install mounting screws and tighten securely.

(5) If required, connect electrical leads to washer fluid sensor.

(6) Fill reservoir with water and/or washer fluid, inspect for leaks and test system.

EXTERIOR LIGHTING

INDEX

| | Page | | Page |
|--|------|---|------|
| Exterior Lighting (Except Headlights) | 167 | Tail, Stop and Turn Signal Lamps | 173 |
| Front Park and Turn Signal Lamps | 167 | Back-Up Lamps and Rear Reflectors | 180 |
| Fender Turn Signal Indicator Lamps | 170 | License Lamps | 181 |
| Front Fender Side Marker and Cornering Lamps | 170 | Headlights | 183 |
| Opera Lamp | 172 | Headlights—Concealed | 187 |
| Rear Side Marker Lamps | 172 | Service Procedures | 167 |

A good ground is mandatory for proper light operation. This is provided through the lamp socket to housing to vehicle in most cases. However, in some installations the housing may be placed in a plastic part so that an added ground wire is necessary. It is important to have this wire securely connected to a good ground.

When changing bulbs check socket for corrosion. If corrosion is present clean it off with a wire brush and coat socket lightly with any good multi-purpose grease or petroleum jelly.

Bulb identification and application information for exterior and interior lighting can be found at conclusion of this Group.

SERVICE PROCEDURES

FRONT PARK AND TURN SIGNAL LAMPS

CARLINE H

Front Park and Turn Signal Lamp (Fig. 1)

To replace bulb, twist out socket. Lamp housing is molded as part of grille.

Removal

- (1) Remove screws from lens.
- (2) Lift off lens.

Installation

Position gasket and lens and install screws.

CARLINE N

Front Park and Turn Signal Lamp (Fig. 2)

To replace bulb, twist out socket. Lamp housing is fastened to bumper.

Removal

- (1) Lens and housing are serviced as a unit only.
- (2) Remove attaching screws and remove lamp assembly from bumper.
- (3) Twist out lamp socket.

Installation

- (1) Twist in lamp socket.
- (2) Position lamp assembly to bumper and attach with mounting screws.

CARLINES R AND W

Front Park and Turn Signal Lamp (Fig. 3)

To replace bulb, remove lens by removing lens attaching screws.

Removal

- (1) Remove assembly attachment screws and pull lamp through bumper opening.
- (2) Disconnect wiring harness.

Installation

- (1) Connect wiring harness.
- (2) Position lamp in bumper opening and attach with assembly mounting screws.

CARLINES S AND X

Front Park and Turn Signal Lamp (Fig. 4)

Twist out socket to replace bulb.