


## SPEED CONTROL STOPLAMP SWITCH

- ☐ 3. Remove factory stoplamp switch and unplug from factory/wiring. Install speed control stoplamp switch as shown in FIGURE 3. NOTE: Refer to "brake section" of vehicle for technical service manual for installation torque and adjustment procedures.

### SPEED CONTROL/STOPLAMP SWITCH INSTALLATION

Figure 3

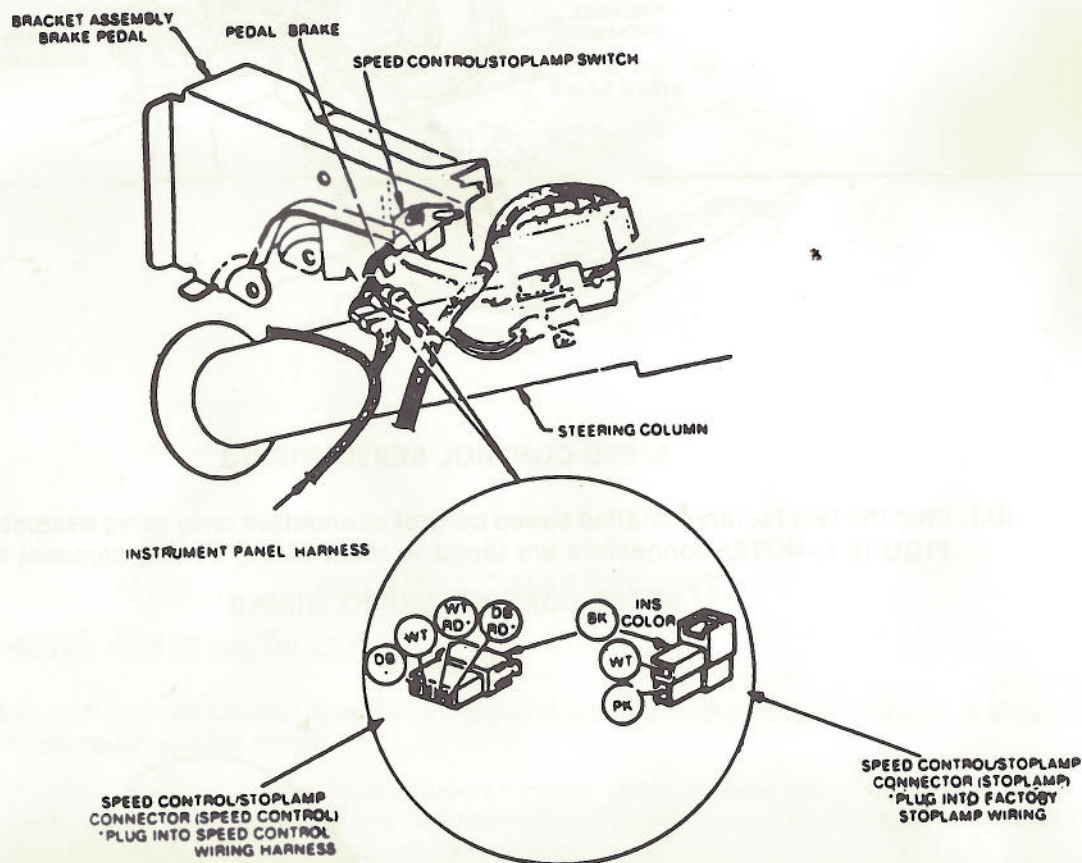

- ☐ 4. VEHICLES ARE EQUIPPED WITH FACTORY INSTALLED SPEED CONTROL HARNESS.

### SPEED CONTROL-STOPLAMP SWITCH

- (A.) Plug speed control/stoplamp switch harness connector into factory mating connector (previously unplugged from original stoplamp switch).
- (B.) Plug speed control/stoplamp switch harness connector into speed control harness.