


## SPEED CONTROL SPEEDOMETER CABLES

(C.) Connect speedometer cables to servo and torque at 10 to 20 in. lbs. See FIGURE 4.

## SPEED CONTROL SERVO SPEEDOMETER CABLES

FIGURE 4

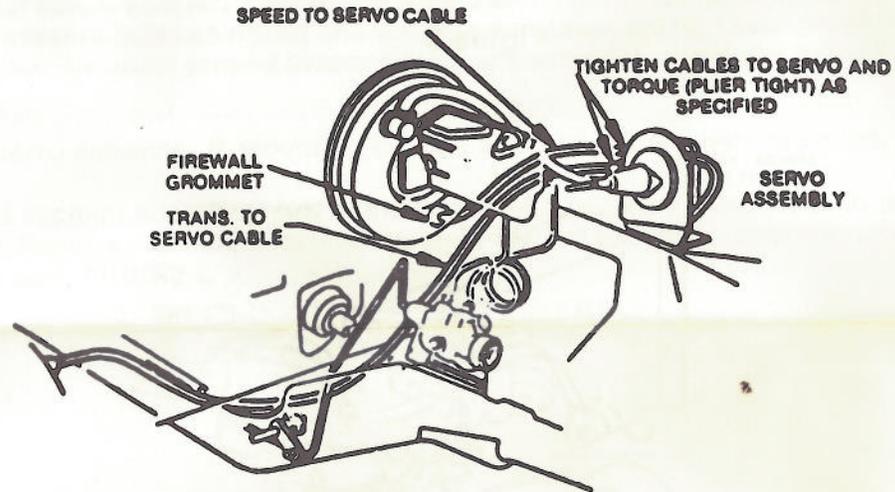

## SPEED CONTROL SERVO WIRING

(D.) Plug the two factory installed speed control connectors onto servo assembly as shown in FIGURE 5. NOTE: Connectors are taped to main wiring bundle adjacent to servo.

## SPEED CONTROL SERVO WIRING

FIGURE 5

