
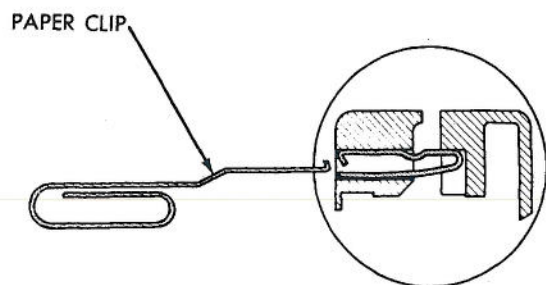


Fig. 2—Ignition Key Lamp and Hazard Warning Switch

tion, remove the ignition switch mounting screws and ignition switch (Fig. 11).


(16) Place pivot pin remover C-4016 over pivot pin and thread small portion of screw firmly into the pin. Hold screw from turning with one wrench, turn nut clockwise with a second wrench to withdraw pivot pin from the support (Fig. 13). Remove opposite pivot pin in same manner.

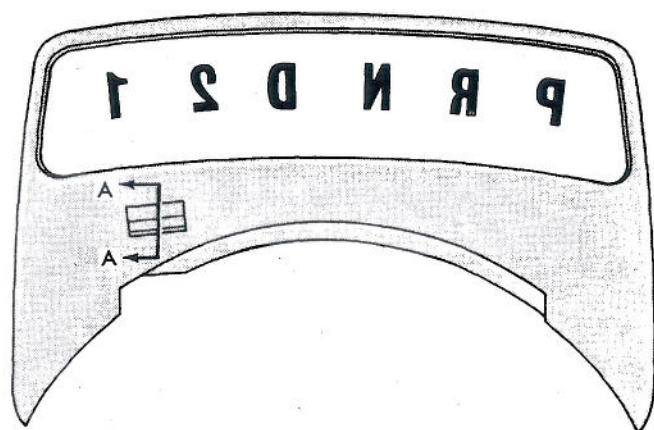

SECTION A-A

PD72A


Fig. 3—Removing Shift Indicator Housing (as viewed from rear)

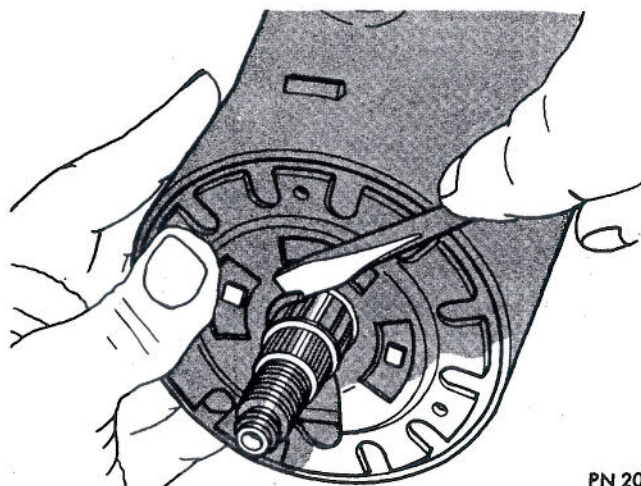

PN 208


Fig. 4—Removing Lock Plate Retaining Ring (Tilt Only)

(17) Use tilt release lever to disengage lock shoes. Remove bearing housing assembly by pulling upward to extend rack fully. Move housing assembly to the

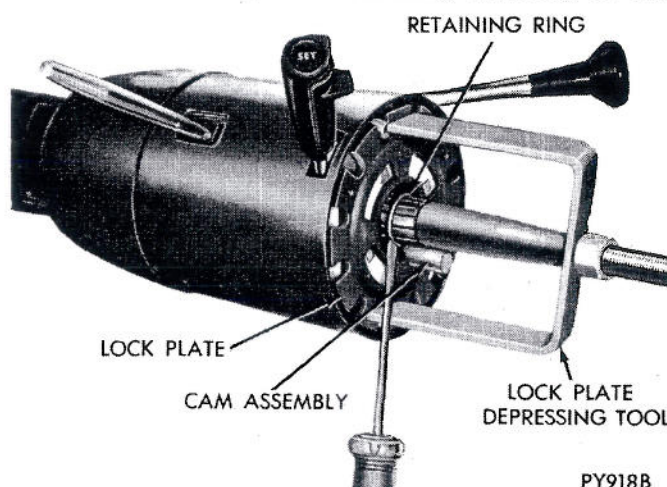

PY918B

Fig. 5—Removing Lock Plate Retaining Ring with Special Tool (Tilt Only)

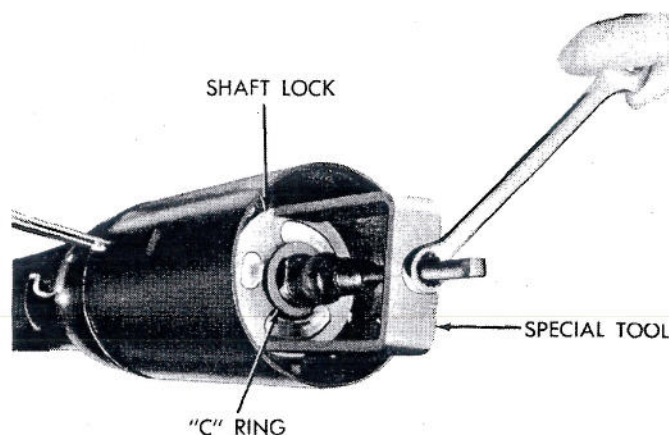

PY941

Fig. 6—Removing or Installing Lock Plate "C" Ring