

Fig. 2—Fuel Tank Assembly

If the filter is plugged, install a new filter (Fig. 6).

(1) Insert a new gasket in fuel gauge opening recess then slide gauge into tank. Align the posi-

tioning tangs on gauge with those in tank. Install locking, then tighten securely using a hammer and non metallic punch.

(2) Using engine oil as a lubricant, install a new filler tube rubber grommet. Be sure that the inner sealing surface of the grommet is not folded.

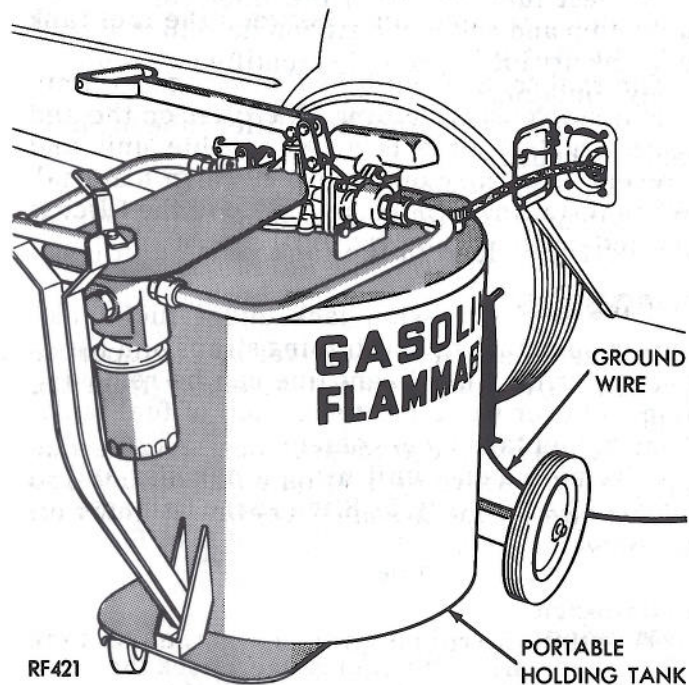


Fig. 3—Portable Holding Tank

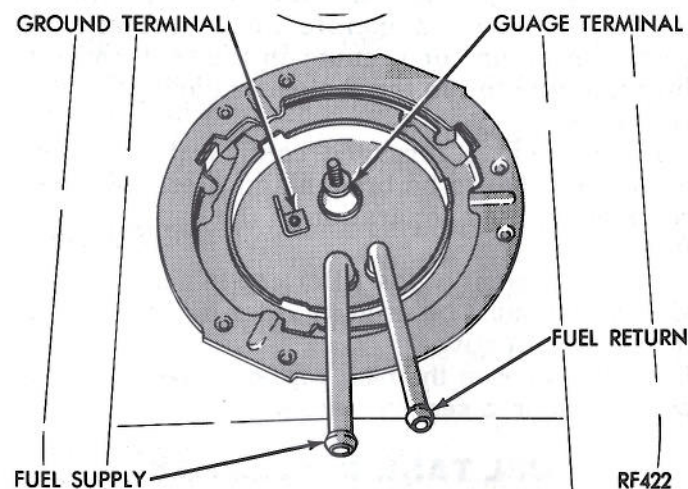


Fig. 4—Fuel Gauge Wiring