

Fig. 2—Front Door Hinges

door moves lower part of door forward (in closed position).

In and out adjustment is made at the door hinge half. Adjust only one hinge at a time. Raising outer end of door moves upper part of door into door opening. Lowering outer end of door moves lower part of door into door opening.

DOOR TRIM PANEL—B,F,G

Removal

- (1) Lower window and remove locking knob.
- (2) Remove mirror control decorative nut—if so equipped (Fig. 5).
- (3) Remove window regulator handle.

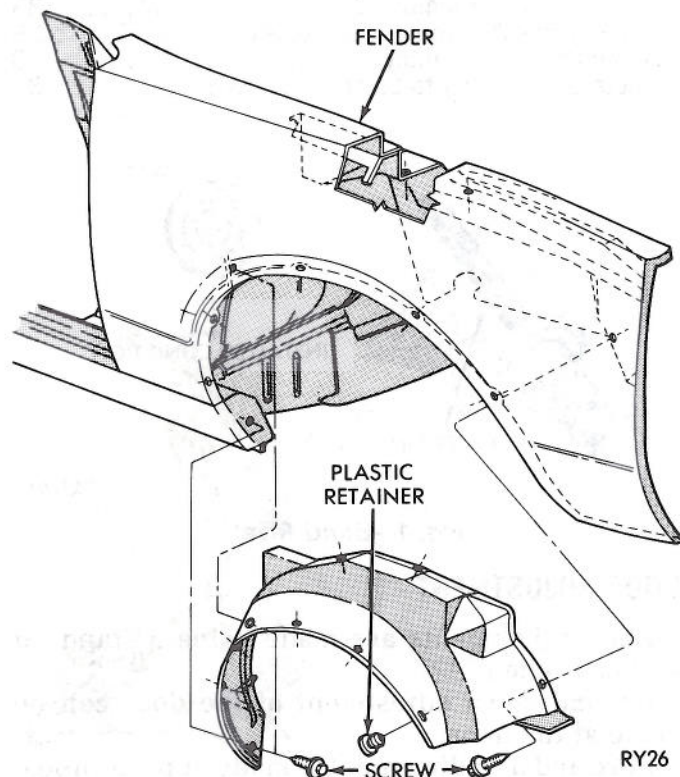


Fig. 3—Fender Splash Shield

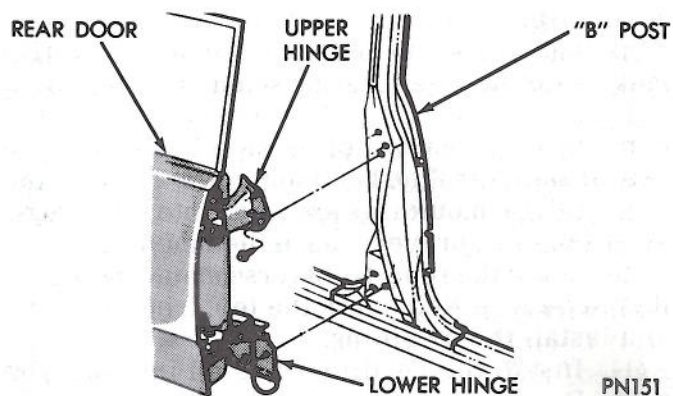


Fig. 4—Rear Door Hinges

- (4) Remove remote control handle.
- (5) Remove electric window switches if so equipped.
- (6) Remove arm rest.
- (7) Using a trim stick, gently pry the trim panel away from the door.
- (8) Disconnect wiring from door mounted components—if so equipped and remove trim panel.
- (9) Reverse above procedure for installation.

FRONT DOOR

Removal

- (1) With door wide open, place a jack (with a block of wood on lifting plate of jack) under door for support.
- (2) Remove door interior trim and hardware.
- (3) Scribe a line around upper and lower hinge plates on door panel.
- On vehicles with electric wiring in doors, disconnect and remove wiring from door assembly.
- (4) Remove door hinge screws and remove door.

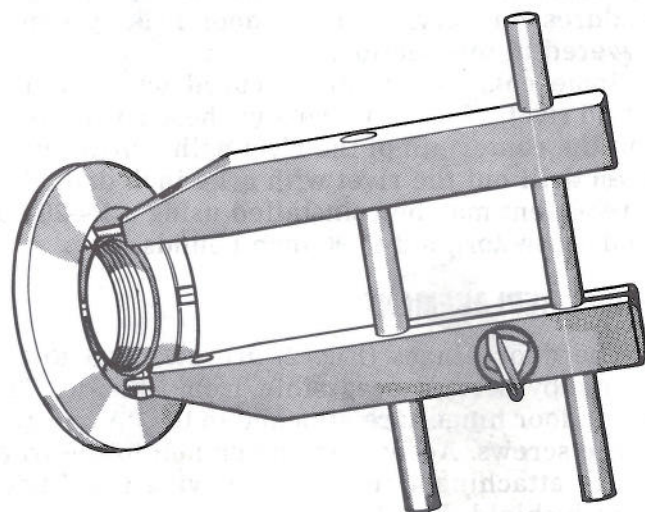


Fig. 5—Decorative Nut Removal