


SPEEDOMETER CABLE INSTALLATION

5. Remove factory-installed speedometer cable from speedo and pull cable with grommet through firewall from engine compartment.
- (A.) Install new speed control speedo cable to speedo and route through firewall into engine compartment. **NOTE:** Route cable in same manner as shown in **FIGURE 6**. Seat cable grommet firmly in firewall. **CAUTION:** Cable must not be kinked and cable routing must be smooth and free of sharp bends.

SPEEDOMETER CABLE ROUTING - INSTRUMENT PANEL FIGURE 6

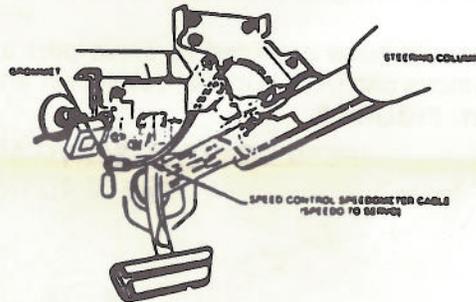

ENGINE COMPARTMENT

[SPEEDOMETER CABLE INSTALLATION]

6. Route the new speed control speedo cable (previously routed through firewall) carefully to left inner fenderwell and lay aside.
- (A.) Remove original factory speedometer cable from transmission and discard. Install new speed control transmission-to-servo cable to transmission and route cable carefully to left inner fenderwell and lay aside.
- NOTE:** Cable ferrule must be firmly seated into transmission adapter as shown in **FIG. 7**. Route cable along left frame structure and fasten down with existing clips.

SPEEDOMETER CABLE — SERVO TO TRANSMISSION

FIGURE 7

